




No.	Parts Description	Qty
1	3mm Shim	1
2	Mounting Plate	1
3	Interlocking L Bracket	1
4	M5x30mm Wood screws	2
5	M3x6mm Machine Screws	3
6	Interlocking Strike Bracket	1
7	Strike	1
8	M4x6mm Machine Screws	2

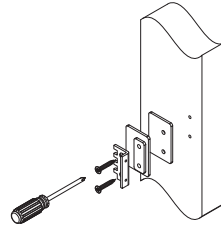

1. Install mounting plate, interlocking L bracket & shim (when required) using M5x30mm screws.

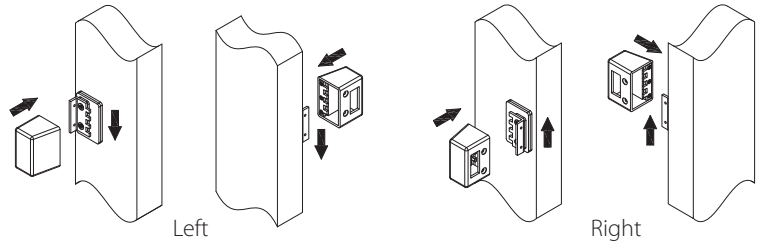

2. Align strike with interlocking bracket to allow strike body and mounting bracket to fit flush. Push strike into place and then push vertically to lock the brackets in place. Push UP for a right hand door and DOWN for a left hand door.

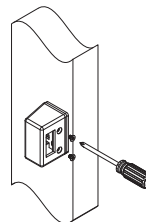

3. Tighten M4x6mm Machine screws with screwdriver